
SLOT VELA

INSTALLAZIONE SU PALI CILINDRICI ESISTENTI CON DIAMETRO 120MM

MEDIANTE UTILIZZO DELL'ACCESSORIO ESPANSORE ART. S. 2835

4) INSTALLARE LA VELA SUL SUPPORTO VELA CON LE 4 VITI M8 X25 LE RONDELLE E I DISTANZIATORI FORNITI (VEDERE IL DETTAGLIO A LATO)

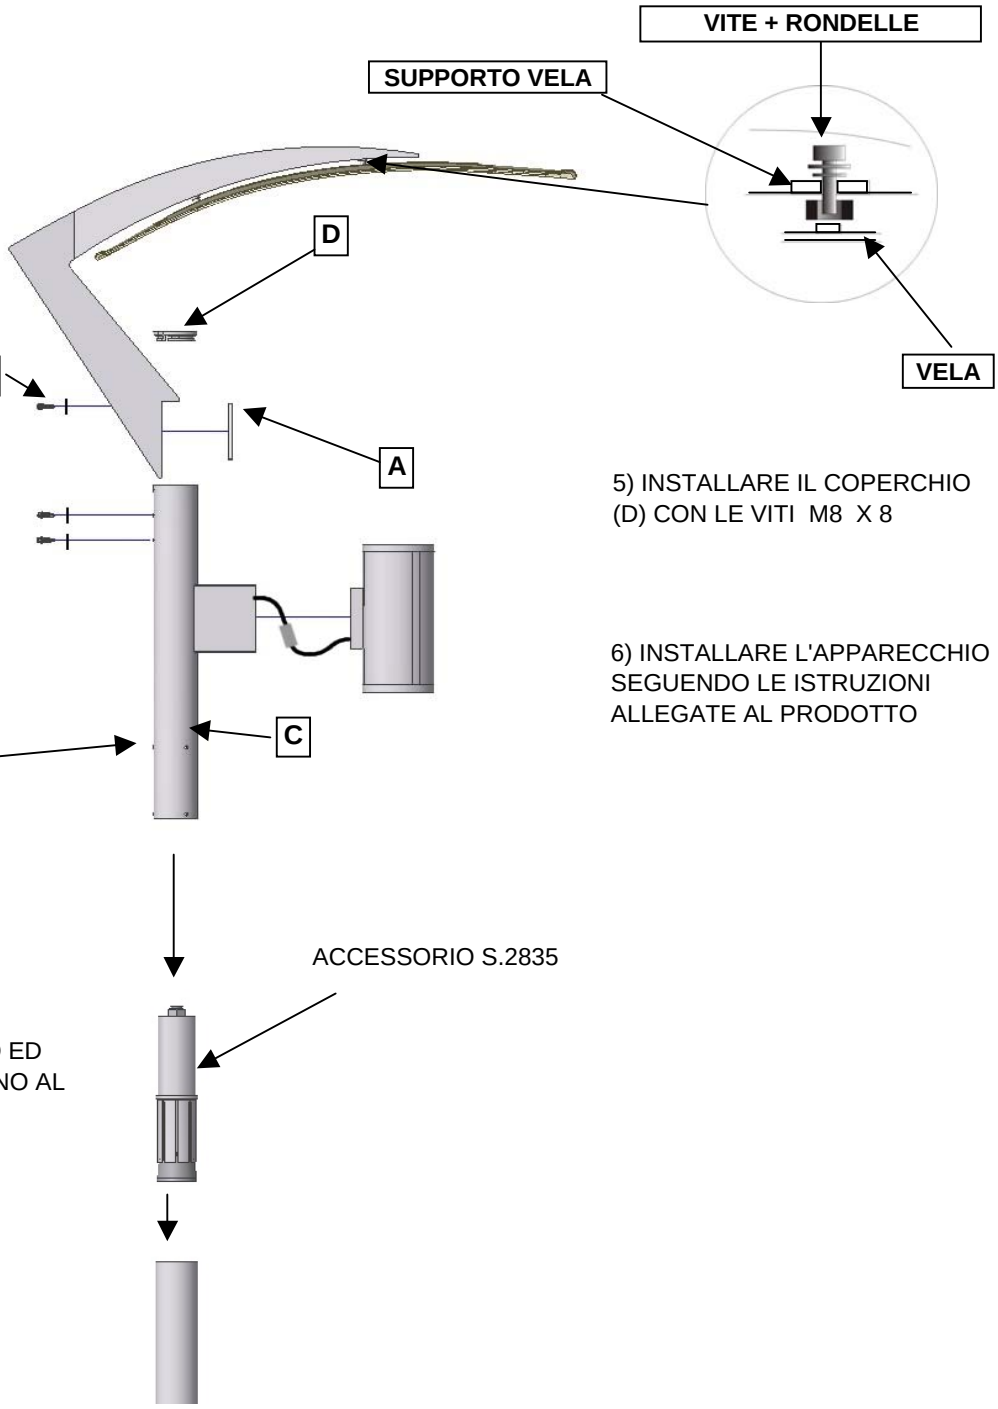

3) FISSARE LA PIASTRA METALLICA (A) CON LA PRIMA VITE M10 X35 + RONDELLA (B) SUL SUPPORTO VELA. INSTALLARE POI IL TUTTO SUL TESTA PALO (C) E IN SEGUITO CHIUDERE LE VITI M10 X 35 + RONDELLE

5) INSTALLARE IL COPERCHIO (D) CON LE VITI M8 X 8

6) INSTALLARE L'APPARECCHIO SEGUENDO LE ISTRUZIONI ALLEGATE AL PRODOTTO

2) INSERIRE SULL'ACCESSORIO ESPANSORE E BLOCCARE LE 6 VITI M8x8

ACCESSORIO S.2835

1) INSERIRE NEL PALO ED AVVITARE IL DADO FINO AL BLOCCAGGIO DELL' ACCESSORIO

PALO ESISTENTE ϕ120mm

SIMES
luce per l'architettura

SLOT VELA


INSTALLATION ON EXISTING POLES 120MM DIAMETER USING ACCESSORY S.2835

4) INSTALL THE WING ON THE WING-HOLDER WITH THE 4 SUPPLIED SCREWS M8 X25 + WASHERS AND RUBBER SPACERS (SEE DETAIL)

3) FIX THE METAL PLATE (A) WITH THE FIRST M10 X35 SCREW + WASHER (B)OF THE WING-HOLDER AND INSTALL IT ON THE HEAD (C) , THEN INSTALL THE OTHER 2 SCREWS M10 X 35 + WASHER

2) INSERT ON THE TOP OF ACCESSORY AND LOCK THE 6 SCREWS M8x8

1) INSERT IN THE TOP PART OF POLE AND SCREW THE NUT UP TO LOCK THE ACCESSORY

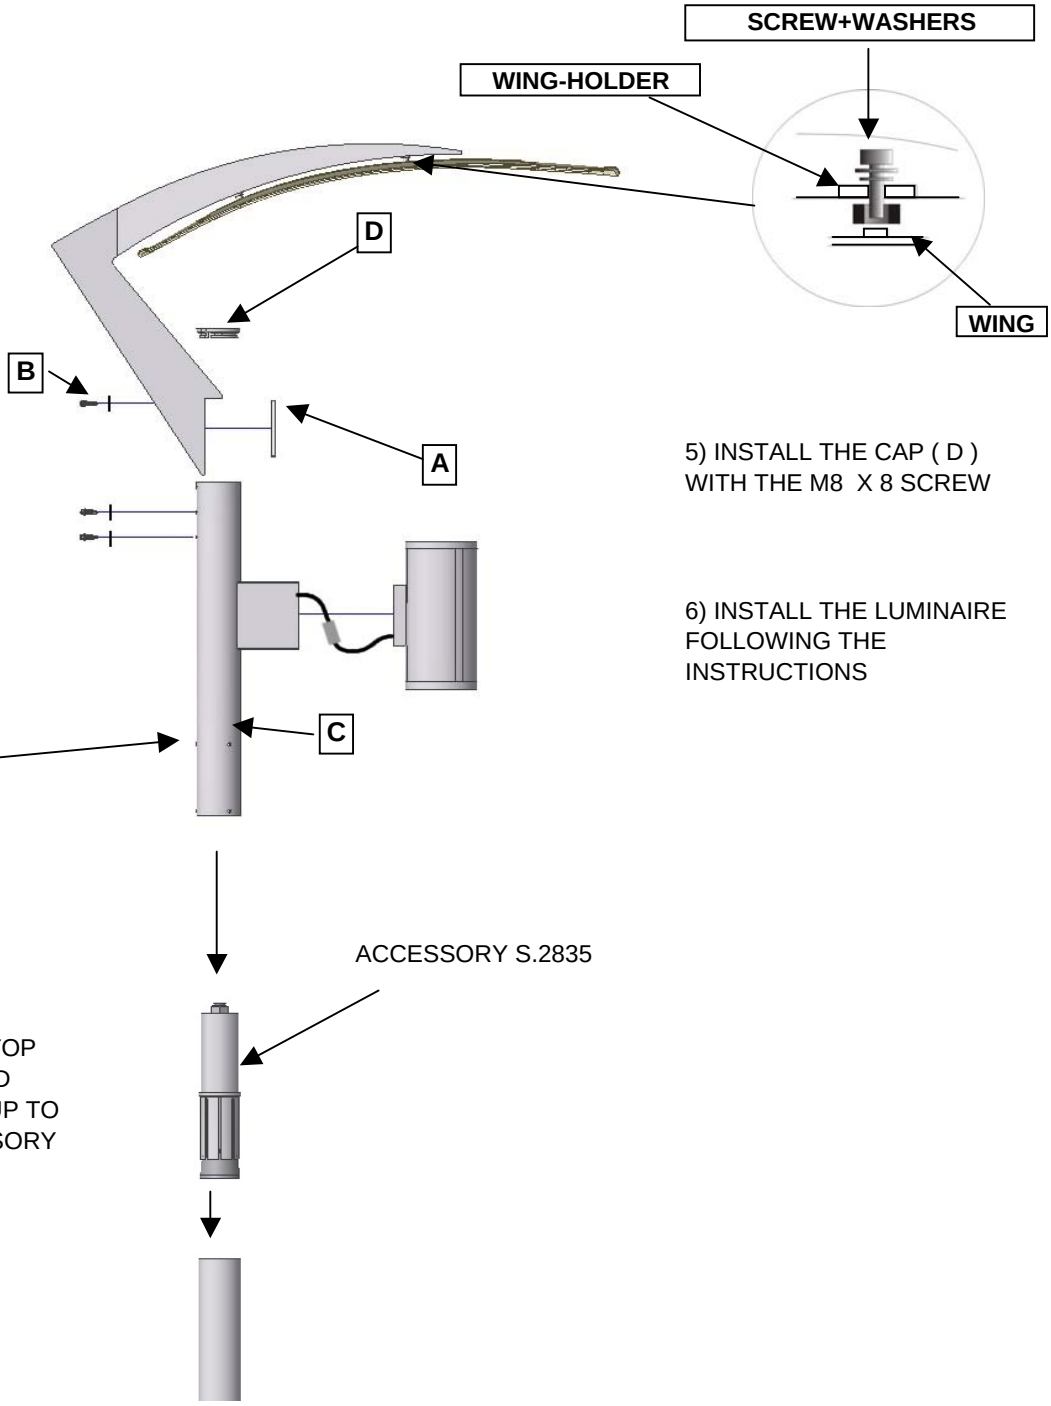

5) INSTALL THE CAP (D) WITH THE M8 X 8 SCREW

6) INSTALL THE LUMINAIRE FOLLOWING THE INSTRUCTIONS

EXISTING POLE ϕ120mm

SIMES
luce per l'architettura